

HumminGuru NOVA


Advanced Ultrasonic Vinyl Record Cleaner



Owner's Manual

Model No. : HG05

Thank you for purchasing the HumminGuru NOVA - Advanced Ultrasonic Vinyl Record Cleaner. To use this product safely and effectively, please read the manual thoroughly and ensure a clear understanding before operation. After reading, please keep the manual accessible for future reference.

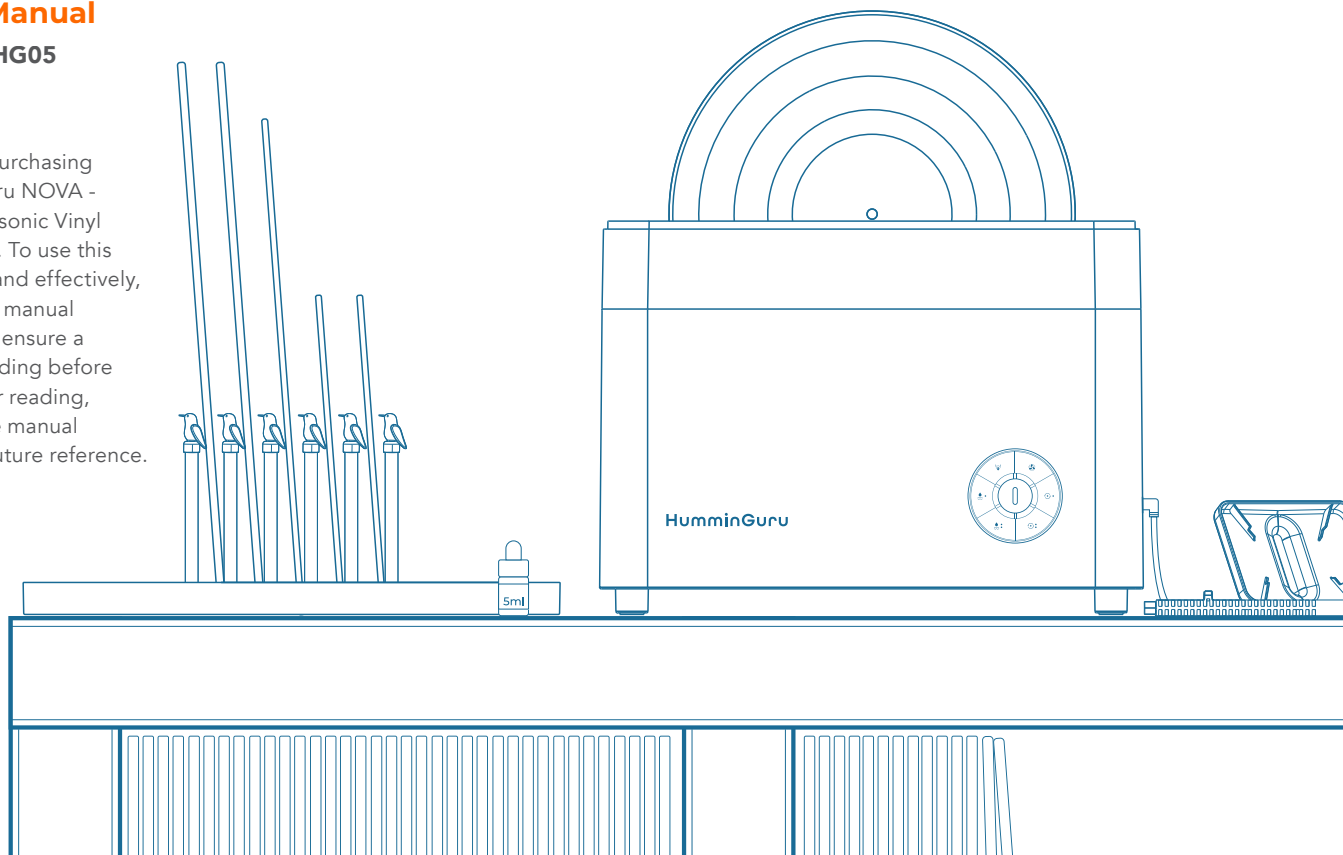



HumminGuru™

Create a new standard of affordable luxury that every
vinyl record enthusiast can enjoy.

Contents

Safety Precaution1

WARNING : The Power Adapter 1

WARNING : The Machine 2

CAUTION 2

Overview3

Part Names 3

Side Control Panel 4

Main Control Panel 5

Removable Water Tank 6

Maintenance Tool 7

Drying Rack 9

- Assembling the Drying Rack 9

- Record Placement 10

- Now Playing Display 10

Machine Setup. 11

Machine Setup for 7" and 10" Records 13

Using the Machine.15

Auto Mode 16

Washing Mode 17

Drying Mode. 18

Draining Mode. 19

Maintenance.20

Clean the Water Tank 20

Clean the Water Basin Filter and 7" & 10" Water Basin
Supports 21

Clean the Water Basin. 21

Air Filter Replacement. 22

Water Filter Replacement 23

Machine Storage 24

Trouble Shooting25

Product Specification27

Limited Warranty27

Safety Precaution

IMPORTANT! Read all instructions carefully before use and keep it for future reference.

HumminGuru NOVA - advanced ultrasonic vinyl record cleaner is limited to cleaning vinyl records that are made out of polyvinyl chloride only. This page is mainly referred to the safety precaution to prevent the property damage and the danger to the users and others. After understanding the indication and the symbols clearly, please read thoroughly and follow the instructions strictly.



WARNING

Indicating "when the product is used wrongly, it may cause severe injuries*¹ and death."



CAUTION

Indicating "when the product is used wrongly, the user may get injured*² or the product may cause property damage*³."

*1: Severe injuries mean to get an electric shock, short circuit, and ignition.

*2: Getting injured mean you get wound and electric shock.

*3: Property damages means the damage to the accommodations, properties, the machine, and vinyl records, etc.

Symbol Explanation



Prohibited



Disassemble
is prohibited



Soaking is
prohibited



Wet hand is
prohibited

 indicates prohibition (must not do).
The details of the prohibition will be instructed by sentences or illustration nearby or in the symbol.



Mandatory



Unplug

 indicates mandatory (must do).
The details of the mandatory will be instructed by sentences or illustration nearby or in the symbol.



WARNING : The Power Adapter

If the power adapter is damaged, you must have it replaced by the manufacturer in order to avoid hazards (please contact us for replacement).



- DO NOT connect the product to the power source that is not specified in the owner's manual.
- DO NOT scratch, bend, pull, twist the power adapter and the power cord.
- DO NOT put the heavy objects, pinch, or modify the power cord.
- DO NOT place the power adapter and the power cord near the heating source.
- DO NOT use if the power adapter or the power cord is damaged or loose.
- DO NOT touch, pull, or insert the power plug with wet hands.



- Keep the machine and its cord out of reach from the children.



- DO clean the power plug and the power adapter regularly with dry cloth.
- DO fully fit the power plug into the wall power outlet.
- DO unplug the appliance when the product is not in use.
- DO unplug the appliance when cleaning or replacing the air filter, the water filter, and the water basin filter.
- DO unplug the appliance when pouring water into the water basin.
- Insert the power plug into the power port completely.



WARNING : The Machine

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

The appliance is only to be used with the power supply unit provided with the appliance.



- DO NOT disassemble, fix, repair, or modify the machine in any way (unless indicated in the manual).



- DO NOT expose the machine to water or immerse the machine in water.



- If overheated, a yellow light will appear. Run the cool down program. Refer to page 17 for instructions.




- The machine must be properly grounded on a flat surface at all time.
- Place the vinyl record properly on both rotation wheels and the water basin filter slot or 7" or 10" water basin supports.




- DO NOT move or tilt the machine during operation.
- DO NOT fill the water basin with water exceeding the maximum water level of 400ml.
- DO NOT clean and dry anything except vinyl records.
- DO NOT insert more than one vinyl record into the cleaner.
- DO NOT operate the machine without water inside of the water basin.
- DO NOT put foreign body, hot water, and any other forms of liquid except water.



CAUTION

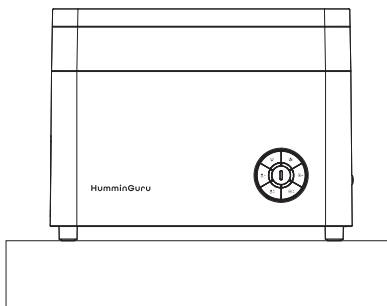

Overview

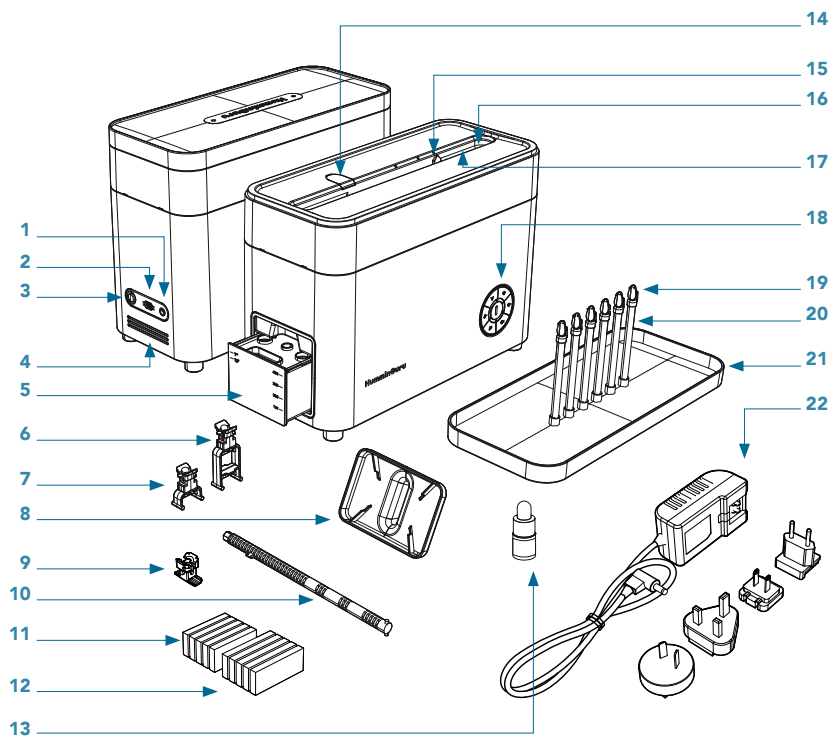


Part Names

1. Power Port
2. Drying Time Setting Switch
3. Power Button
4. Detachable Air Filter Compartment
5. Removable Water Tank
(Including a water tank lid, a detachable water filter slot and a water filter)
6. 7" Water Basin Support
7. 10" Water Basin Support
8. Water Funnel
9. Water Basin Filter
(Also used as a 12" water basin support)
10. Maintenance Tool
11. Water Filters
12. Air Filters
13. The Small Bottle (5ml)
14. Rotation Wheels Adjustment Slot
15. Rotation Wheels Position Indicator
16. Rotation Wheels (Left and Right)
17. Adjustable Fan Outlets
18. Main Control Panel
19. HumminGuru Birds
20. Drying Rack Tubes
21. Cleaner Lid
22. Power Adapter
(Including 4 interchangeable universal plugs)


Side Control Panel

The side control panel has a power button, a drying time setting switch, and a power port. Connect the power adapter to the power port and the wall power outlet and then press the power button until it clicks to turn on the machine.

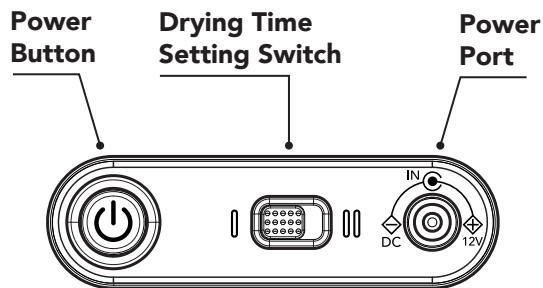

Drying Time Setting

The slide switch for drying time setting gives user the option to select the drying duration for the optimal drying result. For the first time use, the default setting is 3 minutes of drying. Sliding the switch to the right will change the drying time to 6 minutes for the modes that involve drying function. The choice of drying time is subject to the condition of the vinyl record, the temperature, and the relative humidity of the environment.

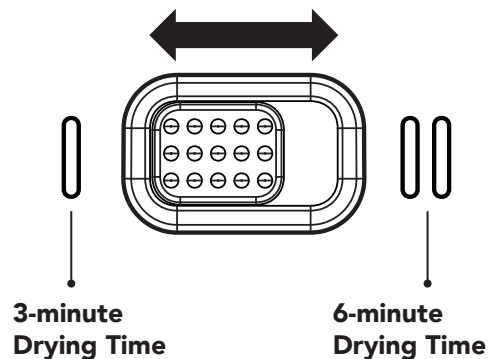

CAUTION

- DO NOT disconnect the power adapter during any operation cycle.
- DO NOT change the drying time setting during any operation cycle.
- Turn off the machine before unplugging the power adapter from the machine or the wall power outlet.

Main Control Panel

Start / Pause

Draining Mode

Quick Washing mode


2-minute washing

Deep Washing Mode

5-minute washing

Heavy Washing Mode:

Press the button once and long press 3 seconds to activate a 10-minute washing cycle.

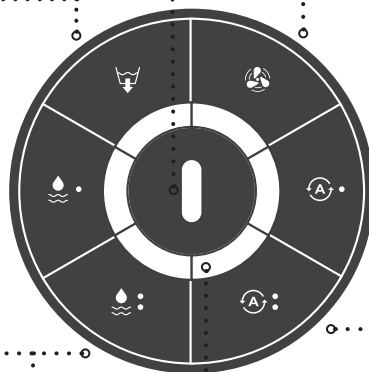

Drying Mode

3 (I) or 6-minute (II) drying

Quick Auto Mode

2-minute washing → draining
→ 3 or 6-minute drying

Deep Auto Mode

5-minute washing → draining
→ 3 or 6-minute drying

Heavy Auto Mode:


Press the button once and long press 3 seconds to activate 10-minute washing during the Auto Mode.

Countdown Timer

When a mode is selected, the countdown timer activates and begins blinking clockwise from the chosen button. The start/pause button lights up with a solid blue light when the cycle is complete.

Removable Water Tank

The removable water tank is located on the left side of the machine. The capacity of the water tank is 400ml. Four different water levels (100, 200, 300, 400ml) and the water level guides for 7", 10", and 12" vinyl records are indicated.

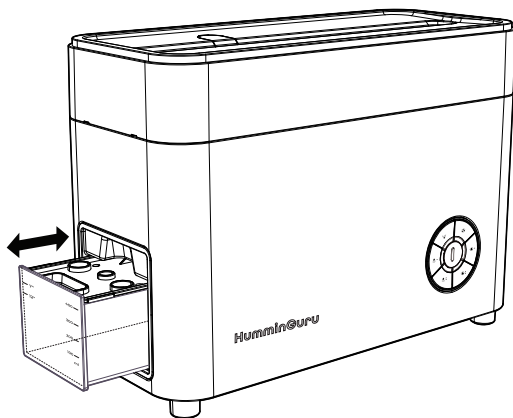


Notice

- Must set the water tank with the lid in place before starting any operation cycle.
- DO NOT remove the water tank during any operation cycle.
- The water level indication guides are for your reference only. The optimal water level should be based on the distance from the edge of your record to the water level that is slightly above the outer ring of the deadwax area.

The water level indication for 12" and 7" record (for reference only)

The water level indication for 12" record also applies to **10" record**.

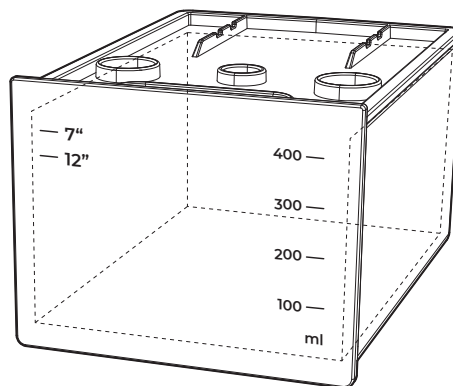

Water Volume

The maximum water level is 400ml.




CAUTION

- DO NOT fill the water tank with water to a level exceeding 400ml. Failing to do so may result electrical shock or machine damage due to water spill.

Maintenance Tool


The maintenance tool is designed to perform three main tasks:

1). Adjust the rotation wheels position to accommodate 7", 10", and 12" records. **2).** Install or remove the water basin filter and 7" & 10" water basin supports. **3).** Work as a water level indicator.

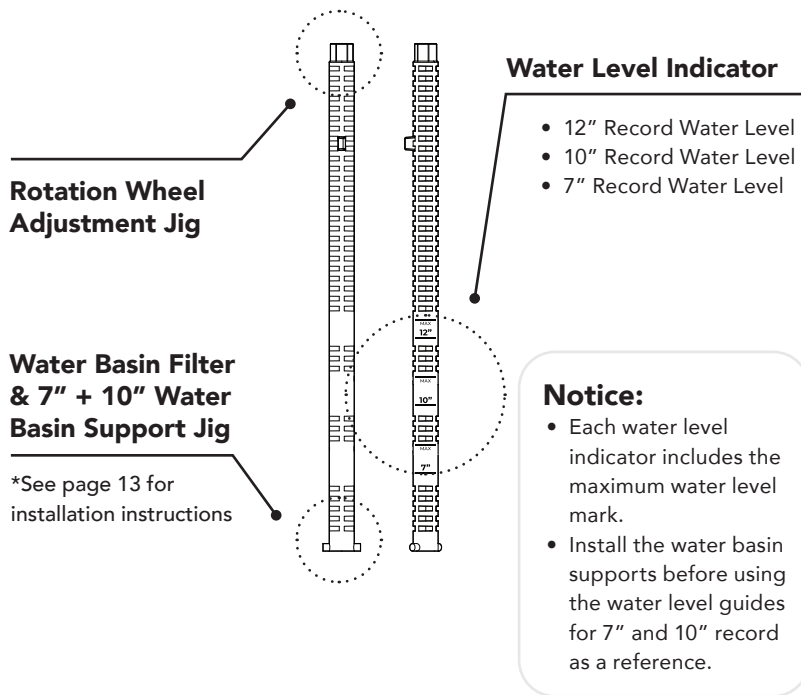


How to use the maintenance tool as a water level indicator


1. Vertically place the tool into the water basin.

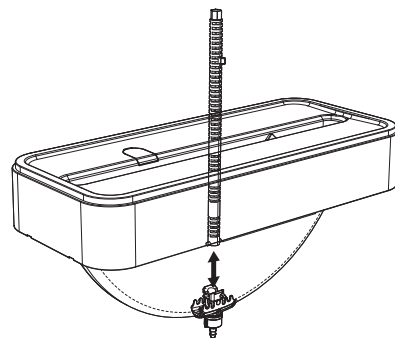



2. Insert the tool into the filter slot and rotate it 45° clockwise to secure the tool.

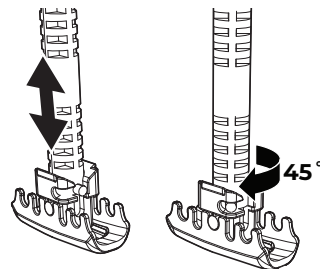

- 3.** Pour in water and check the water level based on the size of your record. **The water level guide is for reference only. Optimal water level should slightly exceed the outer ring of the dead wax area, based on the distance from the record's edge.*

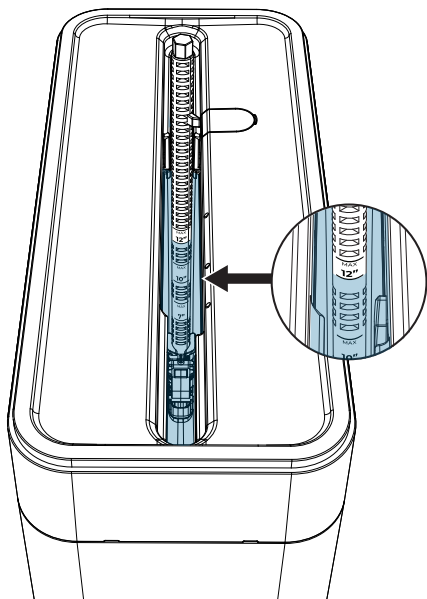

Reminder: If it is a 7" or 10" record, insert the corresponding water basin supports into the water basin filter slot before placing the tool to check the water level.

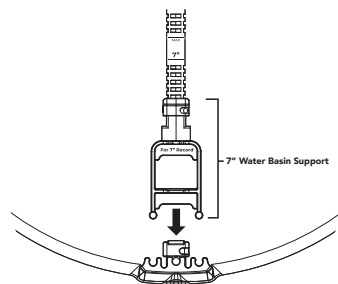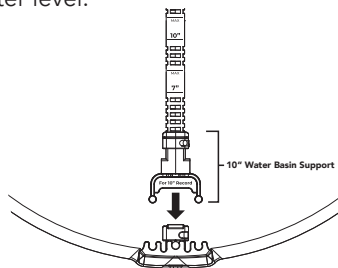

**Refer to page 13-14 for comprehensive instructions on setup.*



CAUTION

- DO NOT fill the water tank with water to a level exceeding 400ml.
- DO NOT bend, pull, and twist the tool when it is inserted in the filter slot. Failing to do so may break or loosen the water basin filter.
- DO NOT allow children to play with the maintenance tool.
- DO NOT bend, twist, or break the maintenance tool.
- DO NOT discard the tool and both of the 7" and 10" water basin supports.

Drying Rack

The cleaner lid has a versatile design that can transform into a drying rack capable of holding up to five vinyl records at a time, including 7-inch, 10-inch, and 12-inch records. It also features a “now playing display.”




CAUTION


- DO NOT bend the tubes.
- Keep the “HumminGuru Birds” rubber stoppers out of reach of children, as they are not intended as toys.
- Place only one record in each record slot.
- DO NOT exceed a maximum of five records on the drying rack.

Assembling the Drying Rack


1. Vertically insert the rubber stoppers, known as the “HumminGuru Bird,” into the drying rack tube.

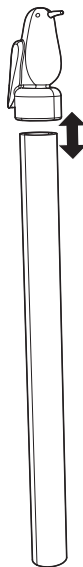

2. Vertically insert the tube into the tube holder on the cleaner lid.

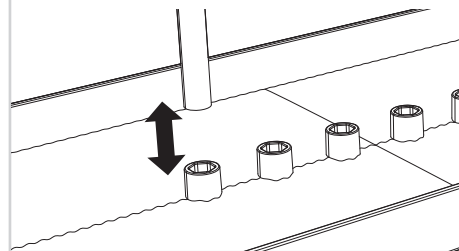


3. Repeat the steps for all six tubes. For convenient storage, the assembled rack can be inserted back into the machine without requiring disassembly.

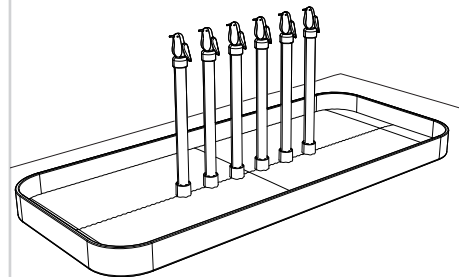


Record Placement

Position the records (7", 10" or 12") between the tubes of the drying rack, allowing them to lean against the "HumminGuru Birds".

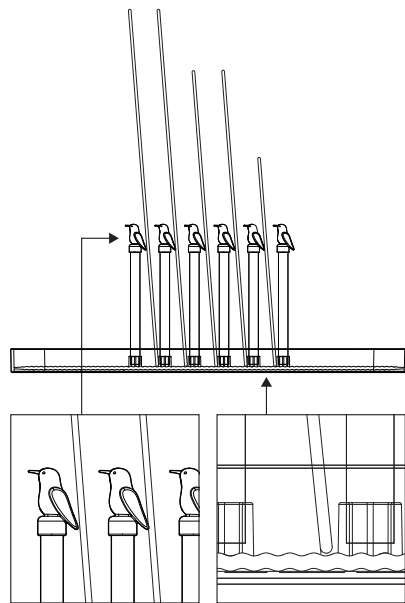


Now Playing Display

The drying rack can also serve as a "Now Playing" display for album covers. It is compatible with all 7", 10", and 12" album covers, which can be placed directly on the rack, leaning against the "HumminGuru Birds".

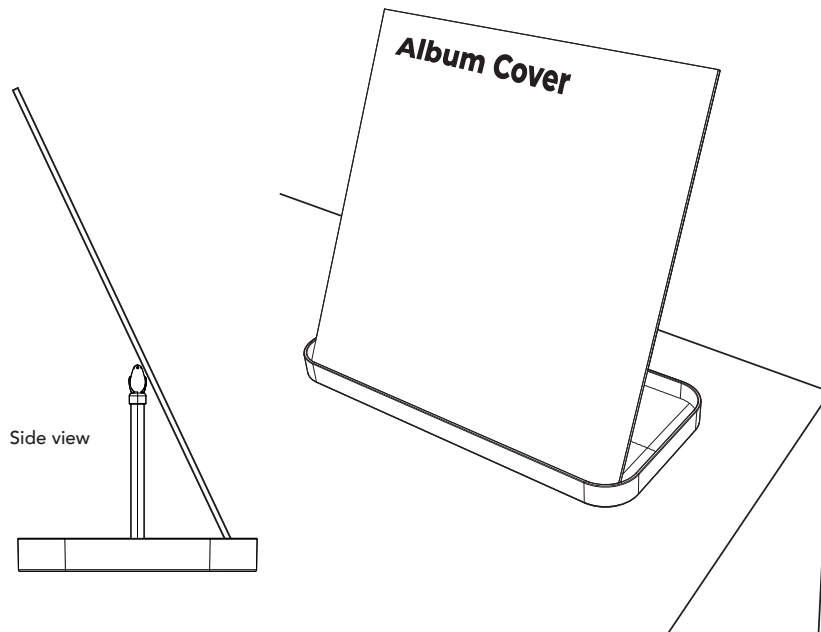


Machine Setup


- 1.** Place on level surface.

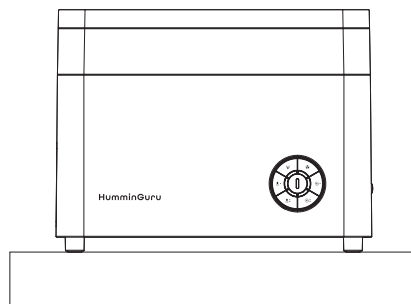


- 2.** Open the cleaner lid.

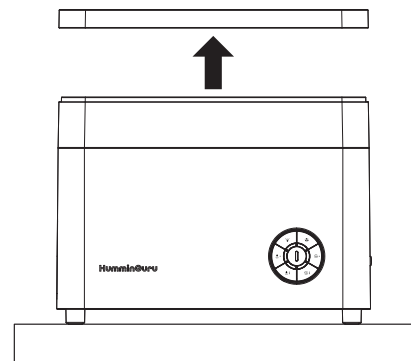

- 3.** Select the correct plug and assemble to the power adapter. Connect the power adapter to the machine. Plug the power adapter to the wall power outlet.

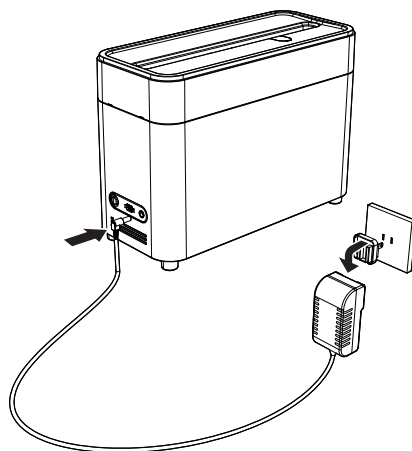

Type A

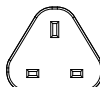

Type G




Type C




Type I


- 4.** Push the power button until it clicks to turn on the machine.

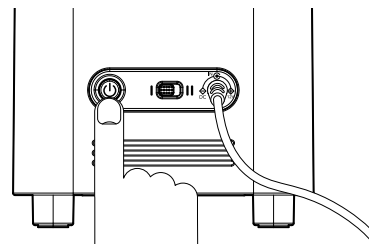

- 5.** Fill the water tank to the desired level, carefully pour the water into the water basin using the provided water funnel, and then reinsert the water tank back into the cleaner.

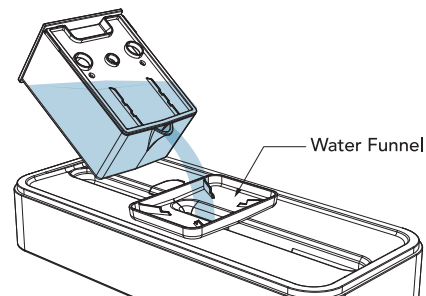


- 6.** Insert the 12" record into the water basin as shown.

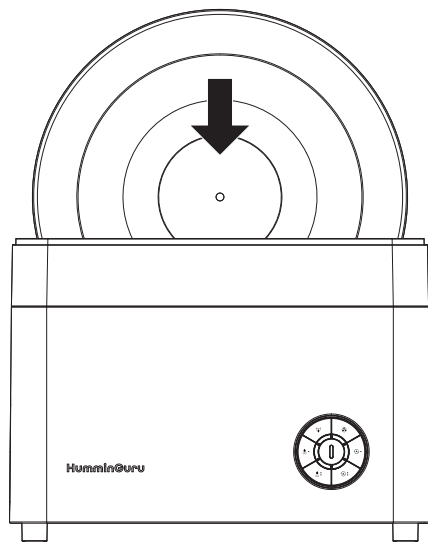

***Refer to the next page for the setup instructions for 7" and 10" record cleaning.*

- 7.** Select a mode and press the start/pause button. The countdown timer will begin and you will be alerted with a blue light when the cycle is complete.

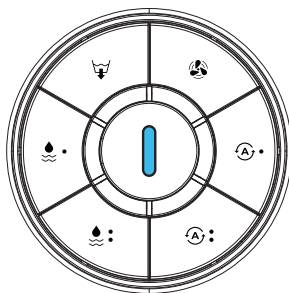

***Go to page 19 to understand the light indication of the start / pause button.*

Advice & Recommendation

The machine can accommodate distilled, demineralized, or de-ionized water; however, if the user resides in a hard water area, it is advisable to avoid using tap water due to the potential presence of limescale and other impurities that may compromise record cleanliness and potentially leave residue in the pipes of the machine.

Highly recommend using **HumminGuru "The Small Bottle"**, a gentle, non-alcoholic surfactant, for optimal cleaning and drying results. Users should be aware of the potential risks associated with using other cleaning solutions on the machine.




CAUTION


- DO NOT fill the water tank to a level exceeding 400ml.
- DO NOT fill the water basin directly from the faucet.
- Gently insert the record with both hands into the water basin.

Machine Setup for 7" and 10" Records




1. Select the corresponding water basin support for 7" or 10" record.

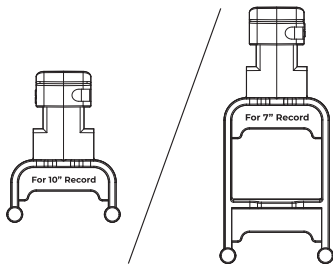

2. To insert the 7" or 10" water basin support, use the maintenance tool to vertically insert the selected support into the water basin filter slot. There is no need to remove the water basin filter beforehand.

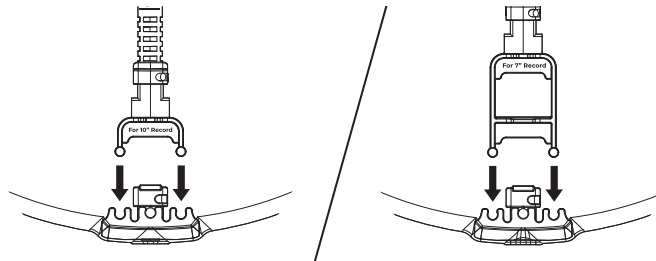


3. Open the rubber cover on the top housing and vertically insert the Rotation Wheel Adjustment Jig. Turn it counter-clockwise to adjust the position of the rotation wheels for 7" or 10" records.

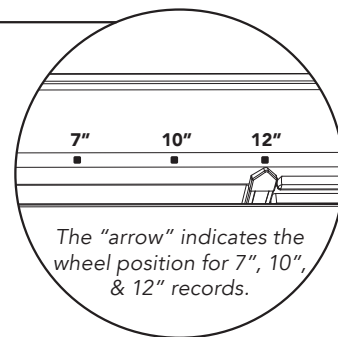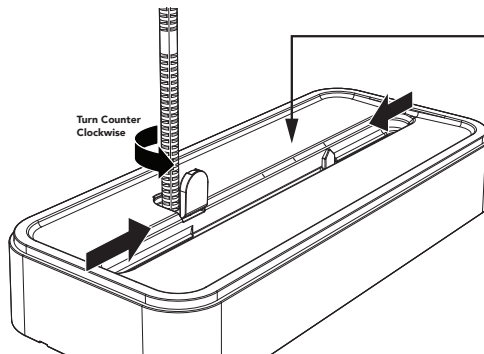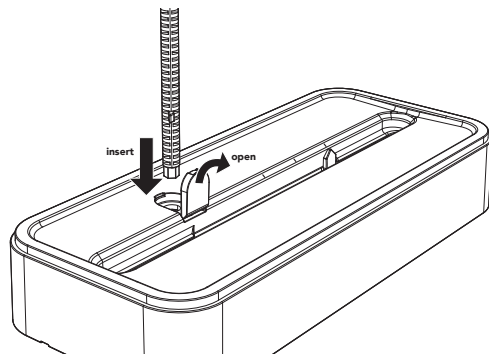

The "arrow" indicates the wheel position for 7", 10", & 12" records.


- 4.** Fill up the water basin and utilize the water level guide to measure the water level.

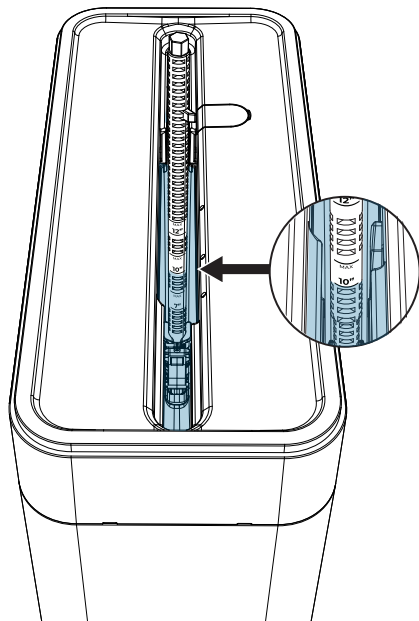


Refer to page 8 for reference.

- 5.** Insert the 7" or 10" record, choose the desired mode, and press the start/pause button. For the next step, please refer to page 12.

10" record

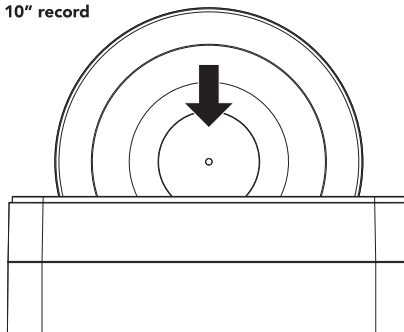

7" record

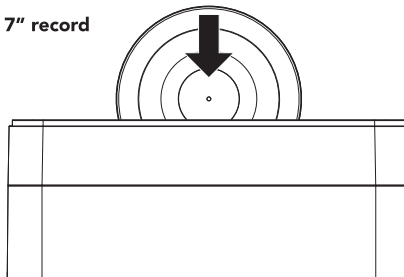

Notice:

- For 7" record, install the water basin support before adjusting the rotation wheels to the 7" position. Reverse the step to take out the 7" water basin support.



CAUTION

- DO NOT change the wheels setting during any operation cycle.
- Gently insert the record into the water basin and place it on the 7" or 10" water basin supports using both hands.

Using the Machine

SELECT THE MODE

There are four mode options to select from based on your preferences.

1. **Auto Mode**
2. **Washing Mode**
3. **Drying Mode**
4. **Draining Mode**

Notice:

- The draining process is set to be 40 seconds long. Air extraction sound at the end of the draining cycle is normal.
- Select your desired drying time of 3-minute (I) / 6-minute (II) on the side control panel before you start the Auto Mode or the Drying Mode.

Basic Operation

To Start

Select a mode and press the start/pause button. The cycle will begin to operate.




To Pause / Resume

Press the start/pause button and the light will turn into a blinking red light. To resume the operation, press the start/pause button again.




To Cancel

Pause the cycle and then long press the start/pause button for 3 seconds until the blinking white light appears.

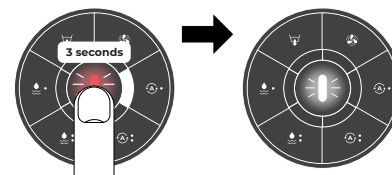

Completion

You will be alerted with a solid blue light when the cycle completes. Press the start/pause button to reset the machine.

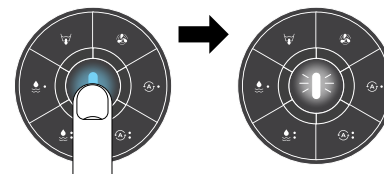

Auto Mode

The Auto Mode is an automatic cycle that washes and dries the record in one step, with three settings available.

Setting 1: Quick Auto Mode




Quick Auto mode concludes with 2-minute ultrasonic washing, followed by automatic draining and drying. This mode is recommended for newly purchased records. Press this button once, and the LED light will begin blinking, then press the start/pause button to initiate the cycle.



Setting 2: Deep Auto Mode

Deep Auto mode concludes with 5-minute ultrasonic washing, followed by automatic draining and drying. This mode is recommended for records that have been stored for a prolonged period. Press this button once, and the LED light will begin blinking, then press the start/pause button to initiate the cycle.

Setting 3: Heavy Auto Mode (2 LED white light is shown)

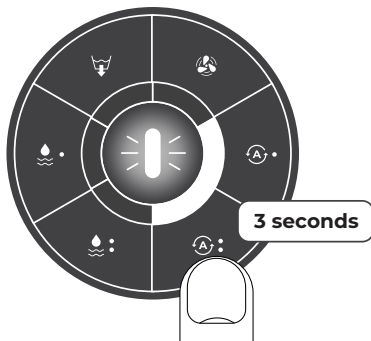

Heavy Auto mode concludes with a thorough 10-minute ultrasonic washing, followed by automatic draining and drying. This mode is recommended for very dirty and moldy records that requires intensive cleaning. To activate this mode, press **A** button once, and then long press the same button for 3 seconds until two white LED lights appear. Afterward, press the start/pause button to initiate the cycle.



CAUTION

- DO NOT start any cycle without water added in the water basin.
- DO NOT move, pull, or push the record during any operation.
- DO NOT move the machine during any operation.

Washing Mode

The Washing Mode allows users to run the washing cycle separately, without the draining and drying cycle. There are three settings available.

Setting 1: Quick Washing Mode

(2-minute washing)



This setting is ideal for new records or records with light dust accumulation. Press this button once, and the LED light will begin blinking, then press the start/pause button to initiate the 2-minute washing cycle.

Setting 2: Deep Washing Mode


(5-minute washing)



This setting is recommended for records that are considerably dirty. Press this button once, and the LED light will begin blinking, then press the start/pause button to initiate the 5-minute washing cycle.

Setting 3: Heavy Washing Mode

(2 LED white light is shown; 10-minute washing)

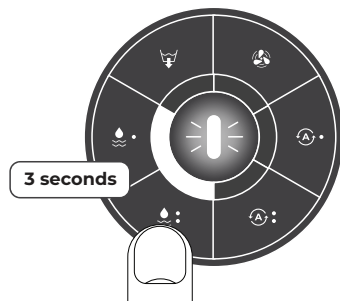

This setting is recommended for very dirty and moldy records that require intensive cleaning. To activate this mode, press  button once, and then long-press the same button for 3 seconds until two white LED lights appear. Afterward, press the start/pause button to initiate the 10-minute washing cycle.

Safety Feature - Thermal Protection

The machine has a thermal sensor to prevent overheating during ultrasonic activity. If the water temperature in the basin reaches or exceeds $\geq 55^{\circ}\text{C}$ ($\geq 131^{\circ}\text{F}$), it will automatically stop the working cycle and display a solid yellow light. To resolve this issue, press the start/pause button once to initiate a cool down cycle. The water will drain out, and the drying fans will activate for cooling simultaneously for 6 minutes. The yellow light will blink until the cycle completes with a solid blue light.



CAUTION

- When the washing mode has been running continuously for more than 30 minutes, power off the machine and let it rest for 15 minutes before starting the next washing cycle.
- DO NOT move, pull, or push the record during any operation.
- DO NOT start any cycle without water added in the water basin.
- DO NOT move the machine during any operation.

Drying Mode




The Drying Mode allows users to dry record separately, without going through a washing cycle.

There are two settings available.

Setting 1: 3-Minute Drying (I)

Setting 2: 6-Minute Drying (II)


Choose the desired drying time based on the condition of the vinyl record, the temperature, and the relative humidity of the environment.

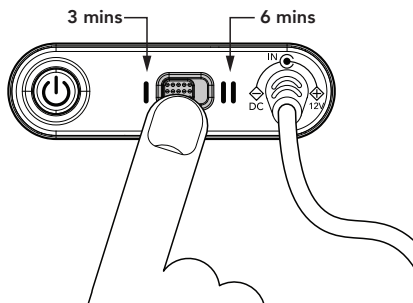

Go to the side control panel and slide the switch to select the appropriate setting. Press  button once and press the start/

pause button to initiate the drying cycle.

*The drying time applies to all modes that involve the drying function.

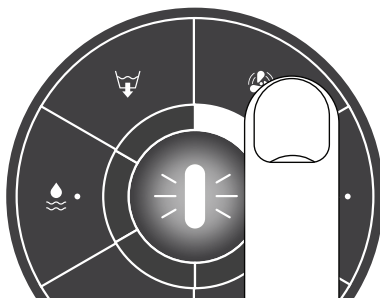

CAUTION

- DO NOT initiate the drying mode when there is water present in the water basin.
- DO NOT change the drying time setting during the drying cycle.

The Small Bottle

Enhance your cleaning experience with The Small Bottle, a specially formulated solution for the HumminGuru Ultrasonic Vinyl Record Cleaner. This unique, alcohol-free formula improves cleaning efficacy by reducing surface tension and enabling better groove penetration during ultrasonic cleaning. It also accelerates drying, particularly in humid environments. With The Small Bottle, a 3-minute drying time is sufficient to completely dry the record.




***5ml sample is included*

Draining Mode



The draining mode enables the user to remove water from the water basin. Each draining session lasts for 40 seconds. This mode is helpful when there is excess water in the basin or when the user wants to change the water after completing the cleaning cycles. Press  button once and press start/pause button to initiate the draining cycle.

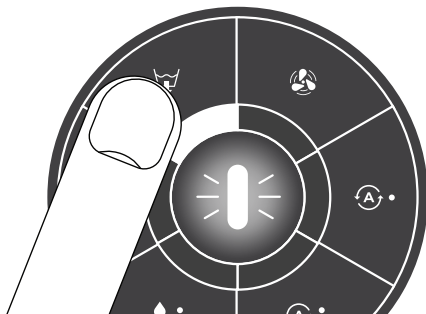

CAUTION

- DO NOT move the machine during the draining process. It may cause water leakage.
- DO NOT remove water basin filter while draining, as this can lead to potential clogging over time.

START/PAUSE Light Indications



Blinking White Light

Standby




Blinking Red Light

Pause



Solid White Light

Operating

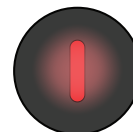

Solid Red Light

Error

(Indicating water tank not in place)



Solid Blue Light

Cycle Complete



Solid Yellow Light

Thermal Protection Triggered

Maintenance

To prolong the service life of the machine, it is recommended to perform regular preventive maintenance and cleaning of the equipment.




CAUTION


- DO NOT clean the water tank with the dish washer or the dish dryer.
- DO NOT move the machine if there is water inside the water basin or the water tank. Doing so may result in product damage.

Clean the Water Tank

1. Select the draining mode and drain all the water from the water basin.

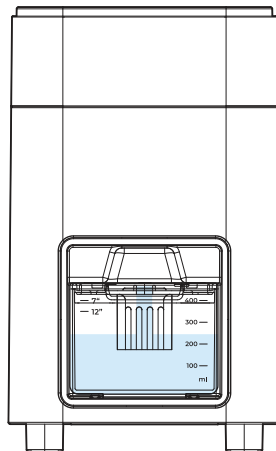


2. Pour away the water in the water tank.

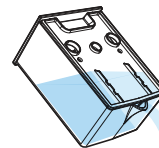

SINK


3. And rinse the water tank, the lid, the filter slot, the water filter, and water funnel thoroughly.

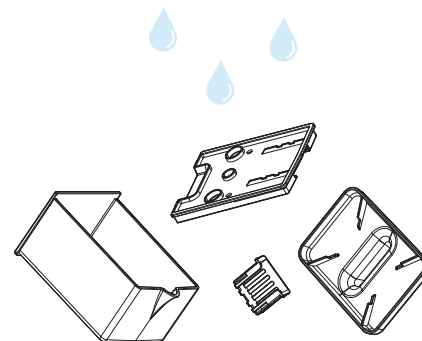

Clean the Water Basin Filter and 7" & 10" Water Basin Supports


The water basin filter is located at the bottom of the water basin. To clean the filter, insert the maintenance tool vertically into the water basin filter slot and turn it 45° clockwise with some force to pull out the filter.

****Note:** If it is the 7" or 10" record cleaning setting, remember to remove the water basin support before taking out the water basin filter.

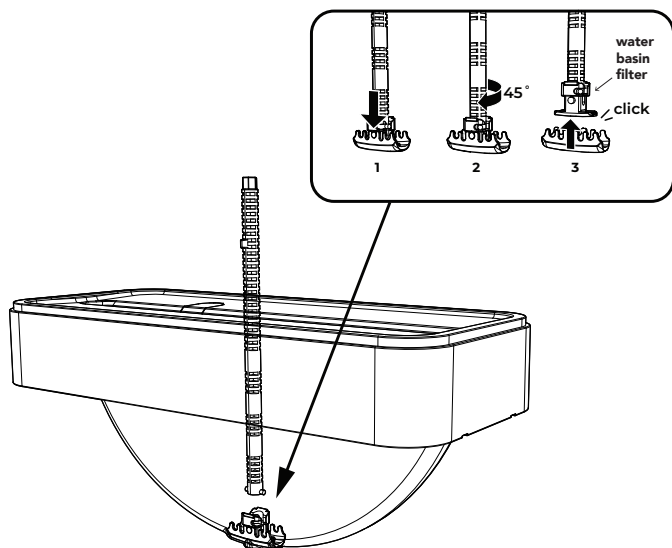


Clean the Water Basin

Wipe the water basin using a damp cloth. For effective cleaning, you can wrap the damp cloth around the maintenance tool and use it to thoroughly wipe the water basin. Ensure that the water basin filter has been removed before cleaning.

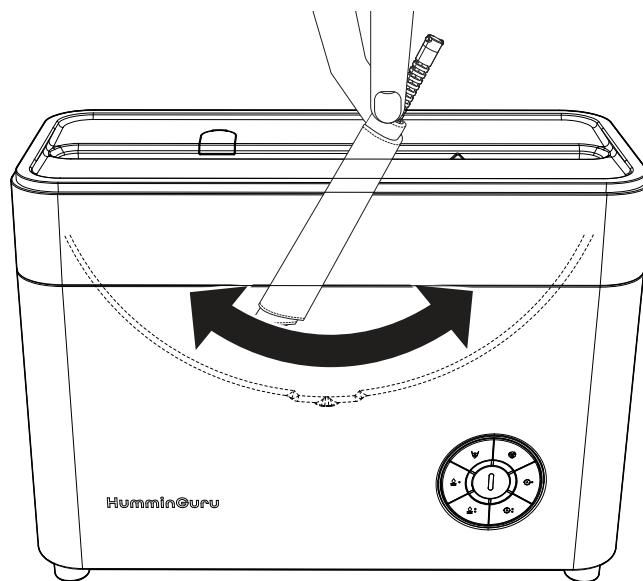

Air Filter Replacement

The washable and replaceable air filter is installed under the side panel of the machine to trap external particles generated during the drying cycle. It is recommended to rinse the air filter with water on a regular basis and air dry completely before use.

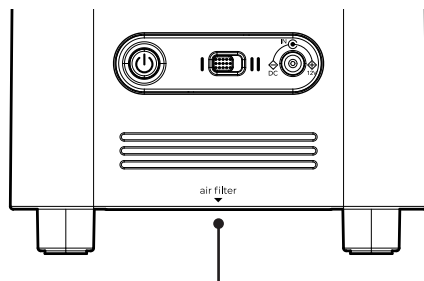



Air Filter Compartment



CAUTION


- DO NOT cover the ventilation opening at the side of the machine. Free airflow is required for proper functioning of the machine.
- DO NOT take out the air filter housing when there is water remaining in the water tank or the water basin.
- DO NOT take out the air filter housing during any operation cycle.

Check the wearing status. Replace it with a new filter when it starts to wear out. To replace, take out the air filter housing from the bottom of the machine and insert the new filter into the housing slot. Then, put the filter housing back into the air filter compartment.

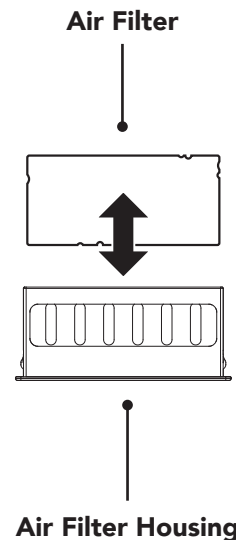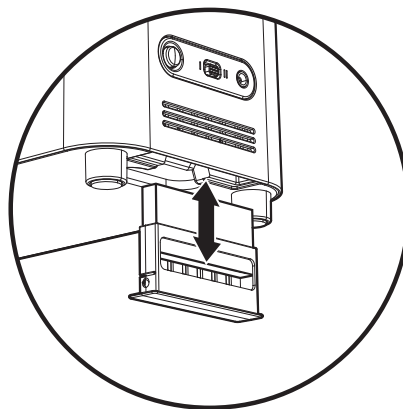


Water Filter Replacement

The washable and replaceable water filter is installed in the water tank to filter out large residue from the water during the washing cycle. It is recommended to rinse the filter with water on a regular basis and air dry completely before use.

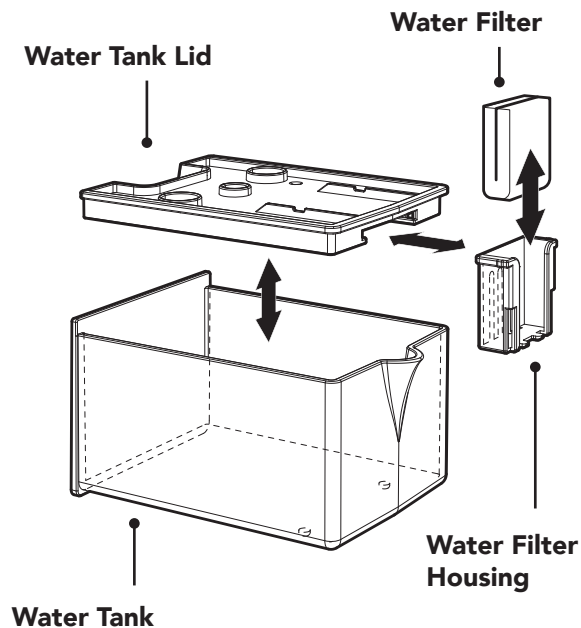

Check the wearing status. Replace it with a new filter when it starts to get dirty or wear out. To replace, fold the water filter in half and insert it into the water filter housing. Make sure that the filter housing is properly re-attached to the lid of the water tank.

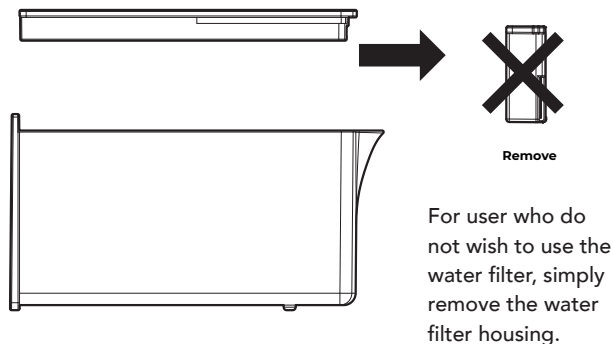


WARNING

- Keep all the water tank parts out of reach from the children.

Machine Storage

When storing the HumminGuru NOVA, do the following:

1. Drain the water completely from the water basin.
2. Remove the water from the water tank and wipe down the water tank parts.
3. Put the water funnel inside the water tank and insert the water tank back into the machine.
4. Cover the cleaner lid and turn off the machine.
5. Unplug the power adapter from the wall power outlet.
6. Store the power adapters and all other accessories in the provided pouch.
7. Leave the pouch on top of the cleaner lid and store the machine in the shelf.

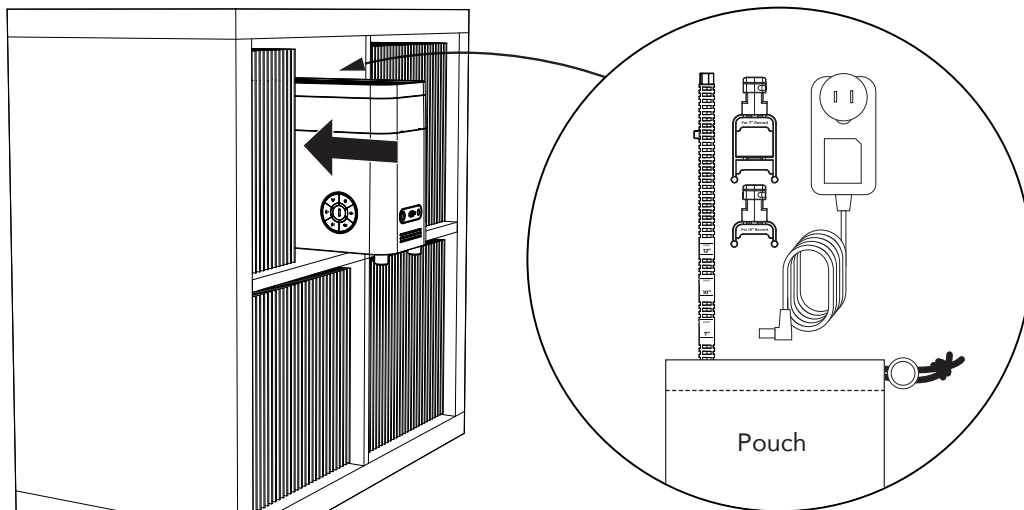

Place all the accessories inside the provided pouch and store it on top of the cleaner lid.

Trouble Shooting

1. The machine won't turn on or start the operation cycle.

Check if your machine is properly connected to a power outlet and then make sure you press the power button all the way in until it clicks. In addition, check if the water tank with the lid is set in place properly.

2. The record label is getting wet.

Pause the cleaning cycle immediately. Take out your record and dry it up first. Long press the start/pause button for 3 seconds to cancel the operation and then select the draining mode to drain the water out of the water basin to the desired level. Use the maintenance tool to double check the water level.

3. There is water remaining in the water basin.

The water basin filter is possibly clogged. Use the maintenance tool to take it out from the water basin (refer to page 21 for guidance). Rinse the filter thoroughly and re-insert the filter. Then, select the draining mode to drain the water out completely. If this does not help, contact customer support.

4. The machine has started to smell.

Switch off the machine and disconnect the power cord from the wall power outlet. Contact customer support.

5. My record does not get dry after one drying cycle.

The complete drying of the record is subject to the condition of the vinyl record, temperature, and relative

humidity of the environment. If the Setting (6-minute) does not completely dry your records, simply re-apply the 3-minute /6-minute drying mode. We recommend that users apply HumminGuru - The Small Bottle, a gentle non-alcoholic surfactant that helps shorten drying time.

6. The record is not turning or not turning smoothly.

Ensure that the vinyl record is securely positioned on the rotation wheels and properly docked in the water basin filter slot. During a washing cycle, verify if the right wheel (R) is rotating as intended. If the right wheel is not rotating as expected, please reach out to customer support for further assistance. Keep in mind that the left wheel (L) is a passive wheel and does not rotate on its own.

7. I accidentally pull out the water tank during the operation cycle.

When the water tank is taken out from the machine during the operation cycle, the "Error" (Solid Red light) signal will appear, and the machine will automatically stop for safety. In this case, insert the water tank properly back into the slot and it will automatically switch back to the standby (blinking white light) mode.

8. The machine stops running, or all light indicators turn off during operation.

This indicates that the machine has entered a self-protection state. Please switch off the power and disconnect the power supply. Allow the device to sit for 45 minutes before reconnecting the power supply. This should restore the machine to normal operation.

9. When should I replace the water filters and the air filters?


Replace the water filter when it is visibly getting darker in color. Even though the water filter is washable, it can experience wear and tear overtime. As for the washable air filter, it is recommended to clean the air filter every 30 days. However, for heavy users, it may be necessary to clean it more frequently. Replace the air filter when it becomes worn out.

10. I often hear a squealing noise during the washing cycle, is it normal?

Yes, it is a normal phenomenon. The pitch fluctuations in ultrasonic sounds can be attributed to various factors, such as the size and the groove of the record, the water temperature, and the energy distribution of the transducers. These fluctuations are generally minor and should not have a significant impact on the cleaning performance of the ultrasonic record cleaner.

11. The machine suddenly stops and display a solid yellow light signal.

The machine automatically stops and alerts with a yellow light when the thermal sensor detects that the water temperature in the basin is $\geq 55^{\circ}\text{C}$ / 131°F . Press the start/pause button to initiate a 6-minute cool-down cycle. The water will drain out, and the drying fans will activate for cooling. The cycle will complete with a blue light signal. If the yellow light persists, run the cool-down cycle again. Contact support for assistance if the problem persists.

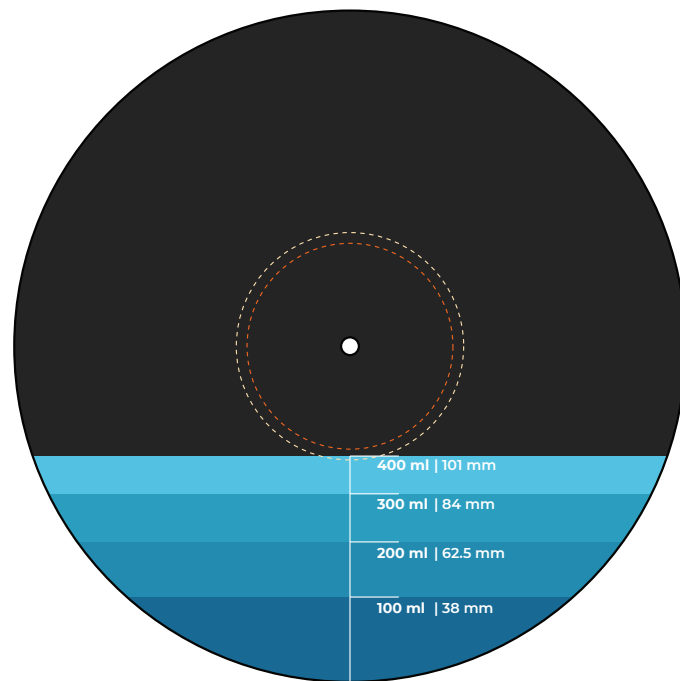

Water level reference chart

12" record label	-----
10" record label	-----
7" record label	-----

Product Specification

Product Name	HumminGuru NOVA Advanced Ultrasonic Vinyl Record Cleaner
Model No.	HG05
Input Power	DC 12V === 5.0A
Output Power	60 W
Power Supply <i>(Power Adapter)</i>	100 - 240 V AC 50 - 60 Hz
Water Tank Total Capacity	400 ml
Product Size <i>(L x W x H)</i>	341 mm x 150 mm x 261 mm
Net Weight (kg) <i>(Accessory not included)</i>	3.4 kg
Ultrasonic Frequency	40 kHz
Ultrasonic Transducers	2 units
Fan Speed	9000 RPM

Limited Warranty

HumminGuru warrants this product against defects in material or workmanship for the original owner and any subsequent end user owner(s) ("You" or "Your") **for one year** from the original date of receipt of product. Pursuant to this Limited Warranty, HumminGuru will, at its option, (i) repair the product using new or refurbished parts, or (ii) replace the product with a new or re-certified/refurbished product. In the event of a defect, these are your exclusive remedies. HumminGuru does not warrant that the operation of the product will be uninterrupted or error-free.

This Limited Warranty covers only the cleaning machine and does not cover separate accessories and technical assistance for hardware usage.

To obtain warranty service, you must contact our customer support (support@happywell.com.hk) and deliver the product, in either its original packaging or packaging affording an equal degree of protection to designated

service location together with a dated purchase receipt in order to obtain warranty service. HumminGuru cannot guarantee that it will be able to repair any product under this Limited Warranty.

Repair/Replacement Warranty

This Limited Warranty shall apply to any repair, replacement part or replacement, rectified or refurbished product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer.

HumminGuru is not responsible for, and this Limited Warranty does not cover, any damage arising from a failure to operate the product within its intended uses, or otherwise follow the owner's manual and safety instructions relating to the product's use and installation. HumminGuru is not responsible for any labor or parts costs you incur relating to repairs or services from providers/servicers other than from HumminGuru authorized providers/servicers. This Limited Warranty only covers product

issues caused by defects in material or workmanship during ordinary consumer use. This Limited Warranty is non-transferable. No other warranty, written or oral, is authorized by HumminGuru.

This Limited Warranty does not cover products purchased from sources other than HumminGuru or HumminGuru authorized dealer (including non-authorized online auctions), or issues due to: (i.) Outdoor exposure and other acts of nature; (ii.) Power surges; (iii.) Lack of reasonable care; (iv.) Accidental damage; (v.) Misuse or abuse; (vi.) The affixing or any attachment not provided with the product; (vii.) Damage, malfunction and/or failure to product resulting from use of parts or supplies not sold or authorized by HumminGuru; (viii.) Damage; malfunction and/or failure to product resulting from servicing not authorized or performed by HumminGuru; (ix.) Modifications of or to any of the product; (x.) Shipping damage; (xi.) Loss of part; (xii.) Use of unauthorized chemical cleaning agents or liquids.

LIMITATION ON DAMAGES:

HUMMINGURU SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES DUE TO A DEFECTIVE PRODUCT OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

The product must be shipped postage prepaid to HumminGuru designated service location. Damage occurring during shipment is not covered by this Limited Warranty. Shipping costs are nonrefundable.

Model: HG05

Purchase Date: (dd/mm/yy)

Date of Receipt: (dd/mm/yy)

Purchase Order #:



HumminGuru™



Find out more at
www.humminguru.com

Contact

For replacement parts, service, or questions,
please contact customer support.

support@happywell.com.hk
www.humminguru.com

Happy Well International Enterprise, Ltd.

Rm. 1202, 12/F New Mandarin Plaza, Tower B,
No. 14 Science Museum Road,
Tsim Sha Tsui East,
Kowloon, Hong Kong